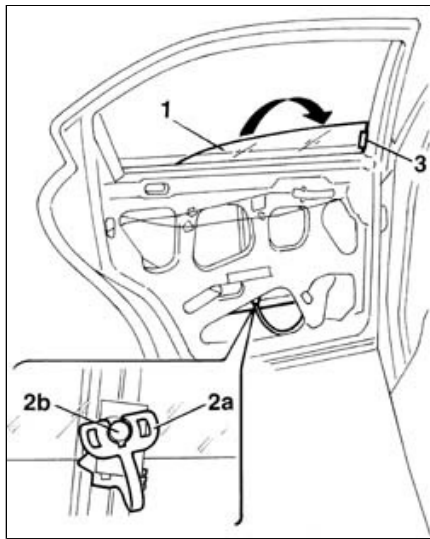




## 166 rear side door descending window glass - r r with door panel (and mount frame) removed 7010D14



 Removing ( [Refitting](#)  )

- **7010A04 rear side door water guard protection - r r or arrange with door panel removed**

 

- **7010D22 rear side door descending window glass guide (one) - r r with door panel (and support frame) removed**

- **7010E54 rear door rear pillar trim - r r**

1. Lower the window completely.

2. Undo clip (2a) retaining the glass to the electrically-operated window device and remove plastic pin (2b).

3. Turn the glass toward the front of the car in order to release the fastening element from the glass slide channel. Then remove the window from the door.

 Refitting ( [Removing](#)  )

Check the condition of the window, fastening element, slide channel and retaining clip.

Fit the window into the door.

Turn the window so that the fastening elements fits into the slide channel.

Fasten the clip and the glass retaining pin.

Raise the window and check it does not stick at any point.

- **7010E54 rear door rear pillar trim - r r**

- **7010D22 rear side door descending window glass guide (one) - r r with door panel (and support frame) removed**

- **7010A04 rear side door water guard protection - r r or arrange with door panel removed**