
eLearn - Contents Page 1 of 2

ALFA 159 1.9 JTD 16V FRONT SEAT (ONE), LEFT OR RIGHT - R.R. 7045A10



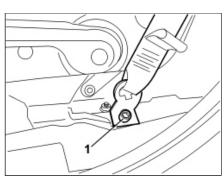

Before removing and refitting the seat the following preliminary operations must be carried out.

- Extract the electronic key.

- Disconnect the battery leads and insulate them.


- Wait for 10 minutes before continuing.

FOLLOW ALL THE RECOMMENDED SAFETY INSTRUCTIONS

Op. 5580C AIR BAG SYSTEM


- Move the seat to the front end of its travel.

- 1. Undo the bolt fixing the end of the front seat belt on the seat.
- 1. Unscrew the rear fixing bolts.
- 2. Disconnect the electrical connections (2a) and (2b).

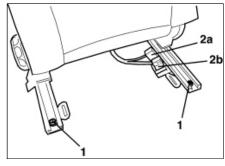

Description	Component
DRIVER"S SEAT COUPLING	See D070 DRIVER'S SEAT COUPLING
PASSENGER SEAT COUPLING	See D071 PASSENGER SEAT COUPLING

- 1. Raise seat (1a) at the rear and release pins (1b) from their seats.
- 2. Release front seat retainers (2a) from their seats (2b) in the floor.
- 3. Recover the seat.
- Move the seat by grasping it only in the area of the head restraint and on the front side of the cushion.

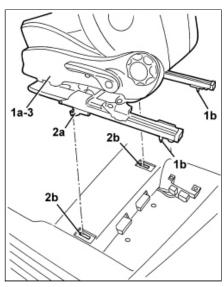




- Check that the seat is not damaged.

It is absolutely forbidden to fit seats with pretensioners or side air bags that have fallen

eLearn - Contents Page 2 of 2

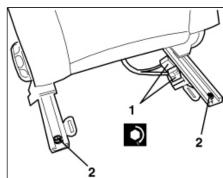


or been subject to abnormal impacts.

Fit the seat with caution, avoiding falls or impact.

Make sure that the battery is disconnected.

- Engage the front seat retainers in their seat on the floor.
- 1. Connect the electrical connections.
- 2. Tighten the rear fixing bolts.

]					
	Component	Fastening	dia	Value (daNm)	Validity
	SEAT GUIDE FASTENING	Bolt	M10x35	2.2 ÷ 2.6	

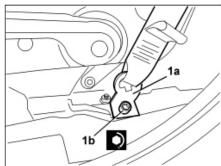

1. Position the end of the front seat belt (1a) on the front seat and tighten the bolt (1b) to the recommended torque.

,	Component	Fastening	dia	Value (daNm)	Validity
,	FRONT SEAT BELT END	Bolt	M10	3.6 ÷ 4.4	

- Check that the seat is working.
- Use an Examiner to check that the system has not acquired errors during the operation.