



ALFA 159 1.9 JTD 16V ONE-PIECE REAR SEAT CUSHION - R.R. 7050A20

[back to CENTRE PILLAR UPPER ELEMENT \(ONE\), LEFT OR RIGHT - R.R](#)

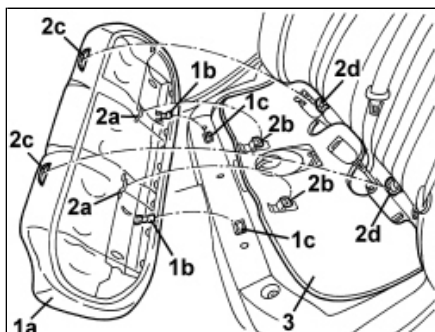

 Removing ([Refitting](#) )

1. Lift up the cushion (1a) at the front and release the retainers (1b) from the seats (1c).
2. Push the cushion backwards until the brackets (2a) are released from the hooks (2b), then lift it up and extract it from the seat, releasing the two brackets (2c) from the retainers (2d).
3. If necessary, remove the sound insulation lining.

 Refitting ([Removing](#) )

- Check that the cushion is not damaged.
- If removed, place the sound insulation lining in position.
- Check that the cushion retainers, hooks and mounting brackets are intact.
- Refit the cushion attaching the retainers, hooks and brackets correctly.