

			Test results		
1	COMPONENT CONCERNED	ALTERNATOR CONNECTION CHECK	OK (NO FAULTS DETECTED)	FAULT DETECTED	OPERATION
	Connections on alternator (short circuit to GND)	Check for the presence of loose connections on the alternator and the engine management control unit	Go to Step 2	Presence of loose connections	Restore the correct connections
2	COMPONENT CONCERNED	ALTERNATOR WIRING CHECK	OK (NO FAULTS DETECTED)	FAULT DETECTED	OPERATION
	Alternator wiring (short circuit to GND)	Check the continuity of the alternator wiring	Go to Step 3	Faults in the continuity of the wiring	Restore the correct continuity for the wiring
3	COMPONENT CONCERNED	ALTERNATOR OPERATION CHECK	OK (NO FAULTS DETECTED)	FAULT DETECTED	OPERATION
	Alternator (short circuit to GND)	Check that the alternator is working correctly See Test 5530AB ALTERNATOR OPERATION CHECK	Go to Step 4	The alternator is not working correctly	Replace the alternator Op. 5530A10 ALTERNATOR - R.R.
4	COMPONENT CONCERNED	ENGINE MANAGEMENT CONTROL UNIT OPERATION CHECK	OK (NO FAULTS DETECTED)	FAULT DETECTED	OPERATION
	Engine management control unit (short circuit to GND)	Check that the engine management control unit is working properly	Go to Step 5	Engine management control unit not working properly	Replace the engine management control unit Op. 1056B82 INJECTION/IGNITION SYSTEM E.C.U. (ONE) - R + R
5	COMPONENT CONCERNED	ALTERNATOR CONNECTION CHECK	OK (NO FAULTS DETECTED)	FAULT DETECTED	OPERATION
	Alternator connections (short circuit to Vbatt or open circuit)	Check for the presence of loose connections on the alternator and the engine management control unit	Go to Step 6	Presence of loose connections	Restore the correct connections
6	COMPONENT CONCERNED	ALTERNATOR WIRING CHECK	OK (NO FAULTS DETECTED)	FAULT DETECTED	OPERATION
	Alternator wiring (short circuit to Vbatt or open circuit)	Check the continuity of the alternator wiring	Go to Step 7	Faults in the continuity of the wiring	Restore the correct continuity for the wiring
7	COMPONENT CONCERNED	ALTERNATOR OPERATION CHECK	OK (NO FAULTS DETECTED)	FAULT DETECTED	OPERATION
	Alternator (short circuit to Vbatt or open circuit)	Check that the alternator is working correctly See Test 5530AB ALTERNATOR OPERATION CHECK	Go to Step 8	The alternator is not working correctly	Replace the alternator Op. 5530A10 ALTERNATOR - R.R.

8	COMPONENT CONCERNED	ENGINE MANAGEMENT CONTROL UNIT OPERATION CHECK	OK (NO FAULTS DETECTED)	FAULT DETECTED	OPERATION
	Engine management control unit (short circuit to Vbatt or open circuit)	Check that the engine management control unit is working properly	End of diagnosis	Engine management control unit not working properly	Replace the engine management control unit Op. 1056B82 INJECTION/IGNITION SYSTEM E.C.U. (ONE) - R + R