




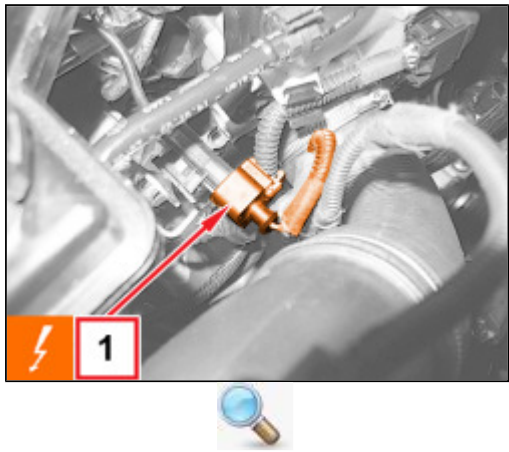
 Detail  Detail

 Removing ([Refitting](#) )

 If removed, the UNIAIR module oil temperature sensor cannot be reused and must therefore be replaced with a new one.

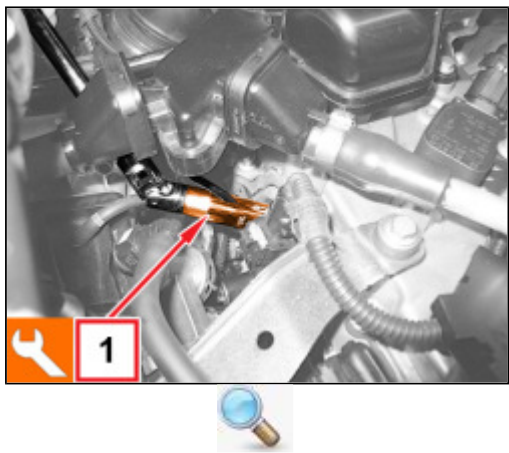
 [Op. 1016A10 SOUND-PROOFING COVER - R.R](#)

1. Disconnect the electrical connection for the UNIAIR module oil temperature sensor.





	Name	Connector
1	Engine oil temperature sensor	See K029 ENGINE OIL TEMPERATURE SENSOR

1. Undo and remove the UNIAIR module oil temperature sensor using the tool.



Tool	Name	Function	Validity
2000034800	Spanner	UNIAIR module oil temperature sensor removal/refitting	1.4 MultiAir 1.4 Turbo MultiAir 0.9 TwinAir

 Refitting ([Removing](#) )

- Use the tool to place the UNIAIR module oil temperature sensor in its housing and tighten to the prescribed torque.

Tool		Name		Function		Validity	
2000034800		Spanner		UNIAIR module oil temperature sensor removal/refitting		1.4 MultiAir 1.4 Turbo MultiAir 0.9 TwinAir	
Component	Fixing		Ø	Value (daNm)		Validity	
UNIAIR module oil temperature sensor	-	-		1.0 ÷ 1.2		1.4 MultiAir 1.4 Turbo MultiAir 0.9 TwinAir	

- Connect the electrical connection for the UNIAIR module oil temperature sensor.

 [Op. 1016A10 SOUND-PROOFING COVER - R.R](#)