

FUSES		
Fuse	Description	Amperage
F01	MK C1 ABS MODULE	70A
F02	GLOW PLUG CONTROL UNIT	60A
F03	FOR BCM RELAY T38	30A
F04	ABS MODULE FANS	40A
F06	SPLITTER	30A
F07	MAIN RELAY (2.9V6 MASTER)	50A
F08	N/A	40A
F09	+30 ECM (2.0GME - 2.9V6 SLAVE); +30 P86	7.5A
F10	HORN	15A
F11	ENGINE SECONDARY LOADS (2.0GME)	15A
	ENGINE PRIMARY LOADS (2.9V6 SLAVE)	
F14	BLOW-BY HEATER (2.2JTDM)	15A
F16	KL15 FOR ECM, ATX, DCTM	5A
F17	ECM (2.2JTDM)	15A
F18	+30 ATX (IF EQUIPPED)	N/A
F19	A/C COMPRESSOR	10A
F20	N/A	7.5A
F22	ECM ENGINE PRIMARY LOADS (SLAVE 2.9V6 AND 2.2JTDM)	20A
F23	ADDITIONAL ELECTRIC WATER PUMP (2.9V6/2.2JTDM)	20A
F24	FOR JTDM ENGINE SECONDARY LOADS	15A
F30	KL30 ATX LEVER	10A
F82	WINDSCREEN WASHER	20A
F83	AWD*	25A
F84	+30 ECM 2.9 V6 MASTER	7.5A
F87	GEARBOX OIL COOLING CIRCUIT ELECTRIC PUMP (2.9 V6)	15A
F89	HEADLIGHT WASHER PUMP	30A
F90	LEFT SPLITTER ACTUATOR (SLAVE)	20A
FXX	RIGHT SPLITTER ACTUATOR (MASTER)	20A

RELAYS		
Relay	Description	Amperage
T07	MAIN RELAY (2.9V6 MASTER)	N/A
T09	MAIN RELAY (JTDM, GME, 2.9V6 SLAVE)	N/A
T17	HEADLIGHT WASHER PUMP	N/A



Underhood - Power Distribution Center (PDC)