




D030 - LEFT FRONT DOOR COUPLING (DRIVER'S FRONT DOOR) [BOSE HI-FI SYSTEM]

APPLIES TO VERSIONS WITH: BOSE HI-FI SYSTEM

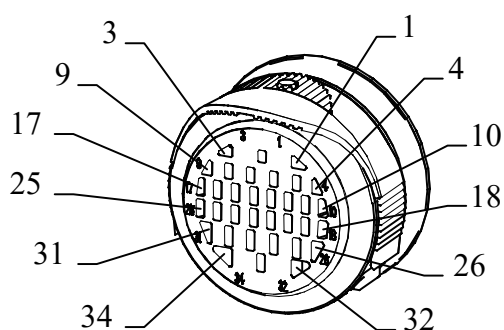

WIRING	COLOUR
See 30 DRIVER'S FRONT DOOR	NERO

PIN	CABLE SEC..	COLOUR	DESTINATION NODE	CONNECT.	PIN
1	0,35	RH		See H051B ELECTRIC WINDOWS AND REAR VIEW MIRROR CONTROLS ON DRIVER'S FRONT DOOR (DRIVER'S FRONT DOOR)	6
2	0,35	VC		See H051B ELECTRIC WINDOWS AND REAR VIEW MIRROR CONTROLS ON DRIVER'S FRONT DOOR (DRIVER'S FRONT DOOR)	5
3	0,35	ZH		See H051B ELECTRIC WINDOWS AND REAR VIEW MIRROR CONTROLS ON DRIVER'S FRONT DOOR (DRIVER'S FRONT DOOR)	4
5	0,35	NR		See H051A ELECTRIC WINDOWS AND REAR VIEW MIRROR CONTROLS ON DRIVER'S FRONT DOOR (DRIVER'S FRONT DOOR)	1
6	0,5	RN		See G051 DRIVER'S FRONT DOOR LIGHT	2
7	1,5	G		See P035 SPEAKER IN FRONT DOOR LEFT	2
8	1,5	GN		See P035 SPEAKER IN FRONT DOOR LEFT	1
9	2,5	N		See N060 DRIVER'S FRONT ELECTRIC WINDOW MOTOR	4
11	1,5	BN		See N050 DRIVER'S FRONT DOOR LOCK GEARED MOTOR	J

12	0,5	RV		See H051A ELECTRIC WINDOWS AND REAR VIEW MIRROR CONTROLS ON DRIVER'S FRONT DOOR (DRIVER'S FRONT DOOR)	4
13	0,35	ZR		See N050 DRIVER'S FRONT DOOR LOCK GEARED MOTOR	F
14	0,35	BZ		See N050 DRIVER'S FRONT DOOR LOCK GEARED MOTOR	H
15	0,5	MN		See P060 DRIVER'S DOOR MIRROR	1
16	0,75	BL		See P045 DRIVER'S FRONT TWEETER SPEAKER	2
17	0,75	BV		See P045 DRIVER'S FRONT TWEETER SPEAKER	1
18	0,35	HG		See H051B ELECTRIC WINDOWS AND REAR VIEW MIRROR CONTROLS ON DRIVER'S FRONT DOOR (DRIVER'S FRONT DOOR)	7
19	1,5	CB		See N050 DRIVER'S FRONT DOOR LOCK GEARED MOTOR	E
20	1,5	CV		See N050 DRIVER'S FRONT DOOR LOCK GEARED MOTOR	K
21	0,35	HM		See H051A ELECTRIC WINDOWS AND REAR VIEW MIRROR CONTROLS ON DRIVER'S FRONT DOOR (DRIVER'S FRONT DOOR)	10
22	0,35	HN		See H051A ELECTRIC WINDOWS AND REAR VIEW MIRROR CONTROLS ON DRIVER'S FRONT DOOR (DRIVER'S FRONT DOOR)	9
23	0,35	HR		See H051A ELECTRIC WINDOWS AND REAR VIEW MIRROR CONTROLS ON DRIVER'S FRONT DOOR (DRIVER'S FRONT DOOR)	3
24	0,35	HV		See H051A ELECTRIC WINDOWS AND REAR VIEW MIRROR CONTROLS ON DRIVER'S FRONT DOOR (DRIVER'S FRONT DOOR)	2
25	0,35	VR		See H051A ELECTRIC WINDOWS AND REAR VIEW MIRROR CONTROLS ON DRIVER'S FRONT DOOR (DRIVER'S FRONT DOOR)	8
27	0,5	N	X	See H051B ELECTRIC WINDOWS AND REAR VIEW MIRROR CONTROLS ON DRIVER'S FRONT DOOR (DRIVER'S FRONT DOOR)	12
				See N050 DRIVER'S FRONT DOOR LOCK GEARED MOTOR	G
				See P060 DRIVER'S DOOR MIRROR	4
29	0,35	H		See H051B ELECTRIC WINDOWS AND REAR VIEW MIRROR CONTROLS ON DRIVER'S FRONT DOOR (DRIVER'S FRONT DOOR)	2
30	0,35	HB		See H051B ELECTRIC WINDOWS AND REAR VIEW MIRROR CONTROLS ON DRIVER'S FRONT DOOR (DRIVER'S FRONT DOOR)	8
31	2,5	RB		See N060 DRIVER'S FRONT ELECTRIC WINDOW MOTOR	6
32	0,35	GR		See H051A ELECTRIC WINDOWS AND REAR VIEW MIRROR CONTROLS ON DRIVER'S FRONT DOOR (DRIVER'S FRONT DOOR)	11
33	0,35	GL		See H051A ELECTRIC WINDOWS AND REAR VIEW MIRROR CONTROLS ON DRIVER'S FRONT DOOR (DRIVER'S FRONT DOOR)	12