



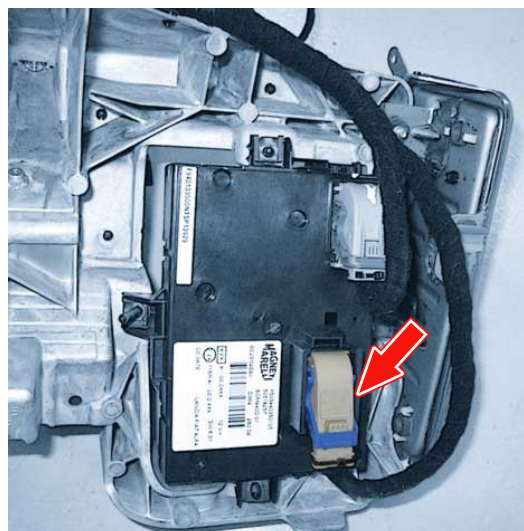

M001H - BODY COMPUTER (DASHBOARD)

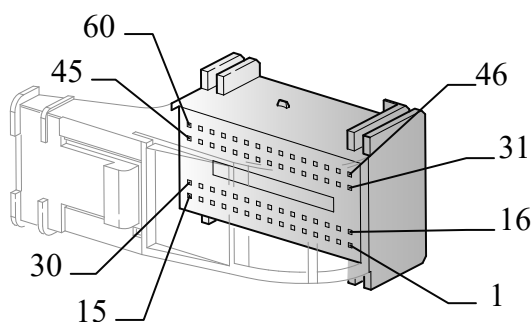

WIRING				COLOUR	
See 20 DASHBOARD				GRIGIO	

PIN	CABLE	COLOUR	DESTINATION		PIN
	SEC..		NODE	CONNECT.	
1	0,35	H		See H090 SWITCH CONTROL PANEL	8
6	0,35	BZ		See H139 ALFA DNA SYSTEM SELECTOR	3
7	0,35	CB		See H090 SWITCH CONTROL PANEL	12
8	0,35	HR		See H020 HAZARD WARNING LIGHTS SWITCH	2
9	0,35	B		See R010 MULTIPLE TESTER CONNECTION	9
10	0,35	B	X	See P020A CAR RADIO (DASHBOARD)	A3
				See P020A CAR RADIO (DASHBOARD)	13
				See M162 BLUETOOTH CONTROL UNIT	14
11	0,35	B		See E050 INSTRUMENT PANEL	5
12	0,35	B		See M060A AIR BAG CONTROL UNIT (DASHBOARD)	3
15	0,35	LH		See P091 AERIAL FOR FIAT-CODE	1
23	0,35	CH		See H090 SWITCH CONTROL PANEL	4
24	0,35	L		See R010 MULTIPLE TESTER CONNECTION	1
25	0,35	L	X	See P020A CAR RADIO (DASHBOARD)	A1
				See P020A CAR RADIO (DASHBOARD)	10

				See M162 BLUETOOTH CONTROL UNIT	30
26	0,35	L		See E050 INSTRUMENT PANEL	6
27	0,35	L		See M060A AIR BAG CONTROL UNIT (DASHBOARD)	1
28	0,35	V		See R010 MULTIPLE TESTER CONNECTION	6
29	0,35	M		See R010 MULTIPLE TESTER CONNECTION	14
30	0,35	NV		See P091 AERIAL FOR FIAT-CODE	2
32	0,35	HM		See H139 ALFA DNA SYSTEM SELECTOR	2
34	0,35	BV		See H090 SWITCH CONTROL PANEL	9
36	0,35	NZ		See H090 SWITCH CONTROL PANEL	6
38	0,35	BM		See D047 CLOCK SPRING COUPLING	4
39	0,35	VC		See H090 SWITCH CONTROL PANEL	10
40	0,35	VH		See H005 STEERING COLUMN SWITCH UNIT	4
41	0,35	BM		See H139 ALFA DNA SYSTEM SELECTOR	4
42	0,35	VM		See H005 STEERING COLUMN SWITCH UNIT	3
43	0,35	VN		See H005 STEERING COLUMN SWITCH UNIT	2
45	0,35	NZ		See H005 STEERING COLUMN SWITCH UNIT	10
46	0,35	HL		See E050 INSTRUMENT PANEL	8
47	0,35	VG		See M192 ALARM CONTROL UNIT	3
49	0,35	GH		See E050 INSTRUMENT PANEL	7
50	0,35	G	X	See P020A CAR RADIO (DASHBOARD)	A6
				See P050 CIGAR LIGHTER/CURRENT SOCKET	1
51	0,35	LM		See D047 CLOCK SPRING COUPLING	3
52	0,35	GN		See H090 SWITCH CONTROL PANEL	3
53	0,35	NZ		See D047 CLOCK SPRING COUPLING	6
54	0,35	ZH		See H005 STEERING COLUMN SWITCH UNIT	5
55	0,35	VR		See H020 HAZARD WARNING LIGHTS SWITCH	4
56	0,35	HM		See H005 STEERING COLUMN SWITCH UNIT	6
57	0,35	BL		See H005 STEERING COLUMN SWITCH UNIT	1
58	0,35	BZ		See H005 STEERING COLUMN SWITCH UNIT	7
60	0,35	CL		See H090 SWITCH CONTROL PANEL	2