


VI - SELECTOR LEVER POSITION INFORMATION

This information is supplied to the ECU by the multifunction switch located on the transmission. It is fitted on the selector shaft which operates the manual valve of the hydraulic unit.

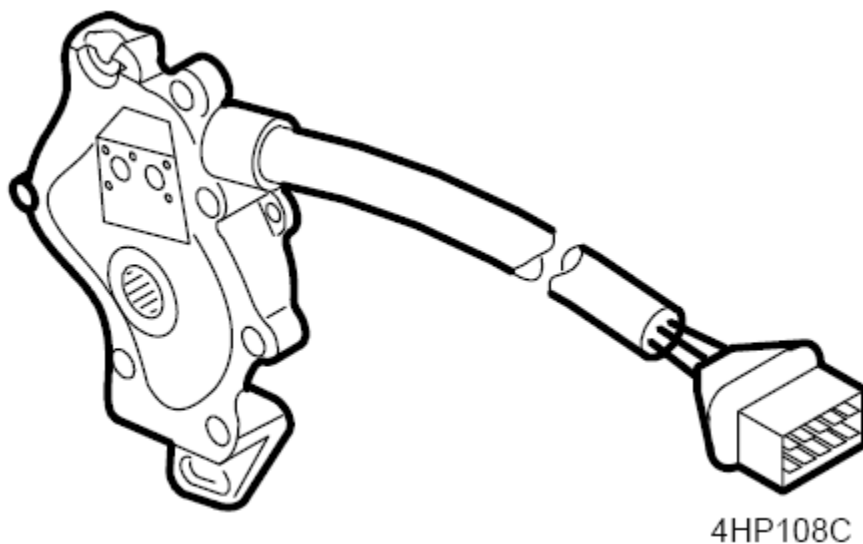

It is used for:

- managing imposed gears,
- displaying the lever position on the control panel,
- preventing the engine from being started in a position other than P and N,
- illuminating the reversing lights in position R.

Note: The multifunction switch cannot be adjusted.