





166 rear door rear pillar trim - r r 7010E54

[back to rear side door descending window glass - r r with door panel \(and mount frame\) removed](#)

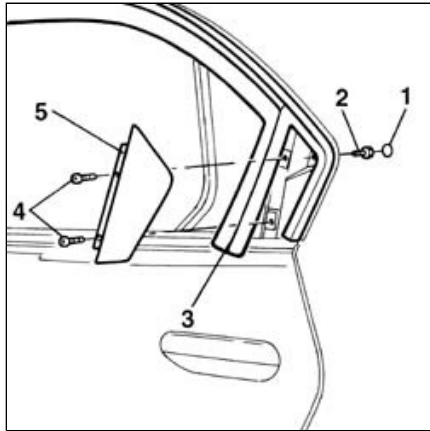

 Removing ([Refitting](#) )

1. Remove the bolt cover panel on the inside of the door.
2. Unscrew the inner trim retaining bolt.
3. Lower the window and prise out the vertical section of the glass slide channel.
4. Unscrew the bolts retaining the outer trim to the pillar located beneath the vertical channel section.
5. Remove the trim by prising out of the door.

 Refitting ([Removing](#) )

Position the outer trim and check it is fitted correctly.

Tighten the two bolts retaining the outer trim.

Tighten the bolt securing the trim to the inner side of the door.

Fit the plug.

Fit the vertical section of the slide channel and raise the window to ensure it moves properly.