


file:///E:/alfa/eLearn/Web/tempcontent5.html

Wiring diagram

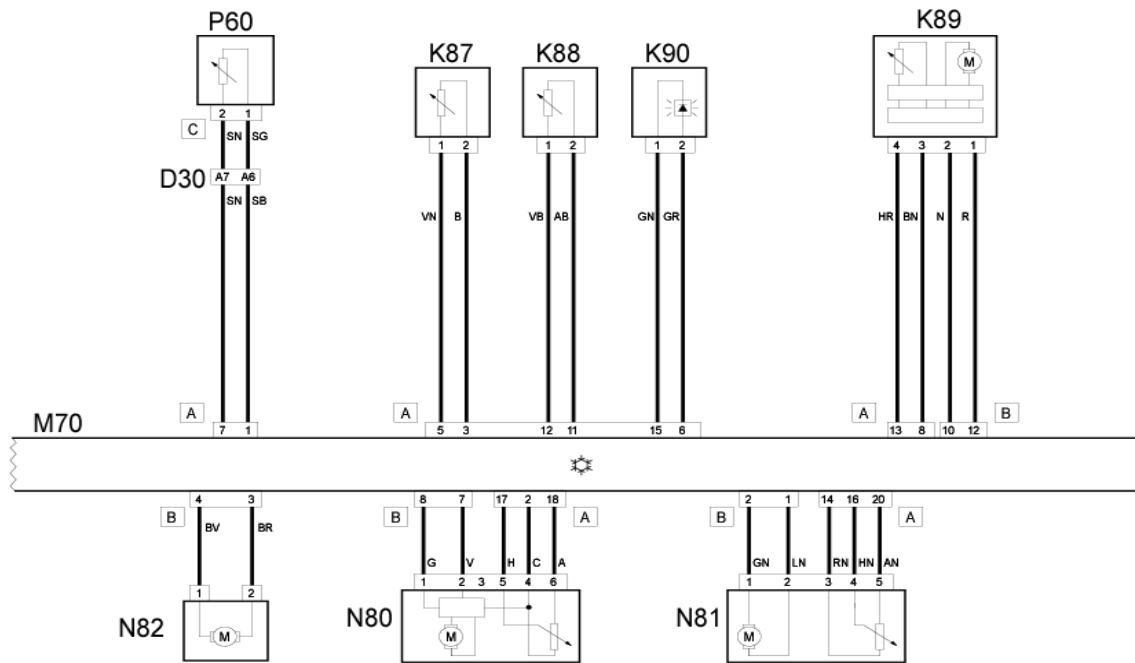

[Full-size](#)



↔ ↑ ↓ + - =

[Full-size](#)

Components

Component code	Name	Assembly reference
B1	Junction unit	5505A
B1	Junction unit	5505A
B2	Junction unit	5505A
B5	MAXI FUSE box	-
B45	Luggage compartment junction unit (CVB)	-
B65	Vehicle interior fan fuse	-
B99	Battery fuses junction unit (CBA)	5530B
C10	Front left earth	-
C21	Dashboard earth on Air Bag bracket	-
C21	Passenger side dashboard earth	-
C25	Earth on steering column	-

C34	ICS earth	-
D1	Front-dashboard coupling	-
D20	Dashboard-rear coupling	-
D30	Driver's front door rear. section.	-
D30	Front left door connection	-
D90	ICS-dashboard coupling	-
E50	Instrument panel	5560B
E60	ICS display	5580M
H1	Ignition switch	5520A
H80	Climate control system controls	5040D
H80	Climate control system controls	5580M
J35	Interior compartment air electric fan relay	5040C
K87	Lower mixed air temperature sensor	5010D
K88	Upper mixed air temperature sensor	5010D
K89	Passenger compartment air temperature sensor	5010D
K90	Solar sensor	5010D
M70	Climate control system control unit	-
M70	Climate control system control unit	5040B
N80	Air distribution flap actuator (motor)	5040D
N81	Mixed air flap actuator (motor)	5040D
N82	Outside air intake flap actuator (motor)-	5040D
N85	Passenger compartment ventilation fan	5040C
P60	Left door mirror	7005R
R10	Multiple tester connection	-